


INSTALL AND FLASH WINDOW
AS PER MANUFACTURER'S
SPECIFICATIONS

CHECK LOCAL BUILDING
CODES BEFORE EXECUTING
THIS DETAIL

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS
3. CONTRACTORS NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT WWW.MTIDRY.COM

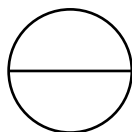

THIN CUT STONE TO WINDOW SILL TERMINATION

SURE CAVITY™ (SC 5016, SC 5032), 10MM SURE CAVITY™ (SCMM 2516, SCMM 2532),
GRAVITY CAVITY™ (GC 1832), WINDOW DRAINAGE PLANE™ (WDP 5000)