


Poured Foundation Wall Installation with Top of Concrete Stem Wall Slope to Drain

Mortar Belt™ (MB 3550) and Cavity Weep™ (CV 5010)

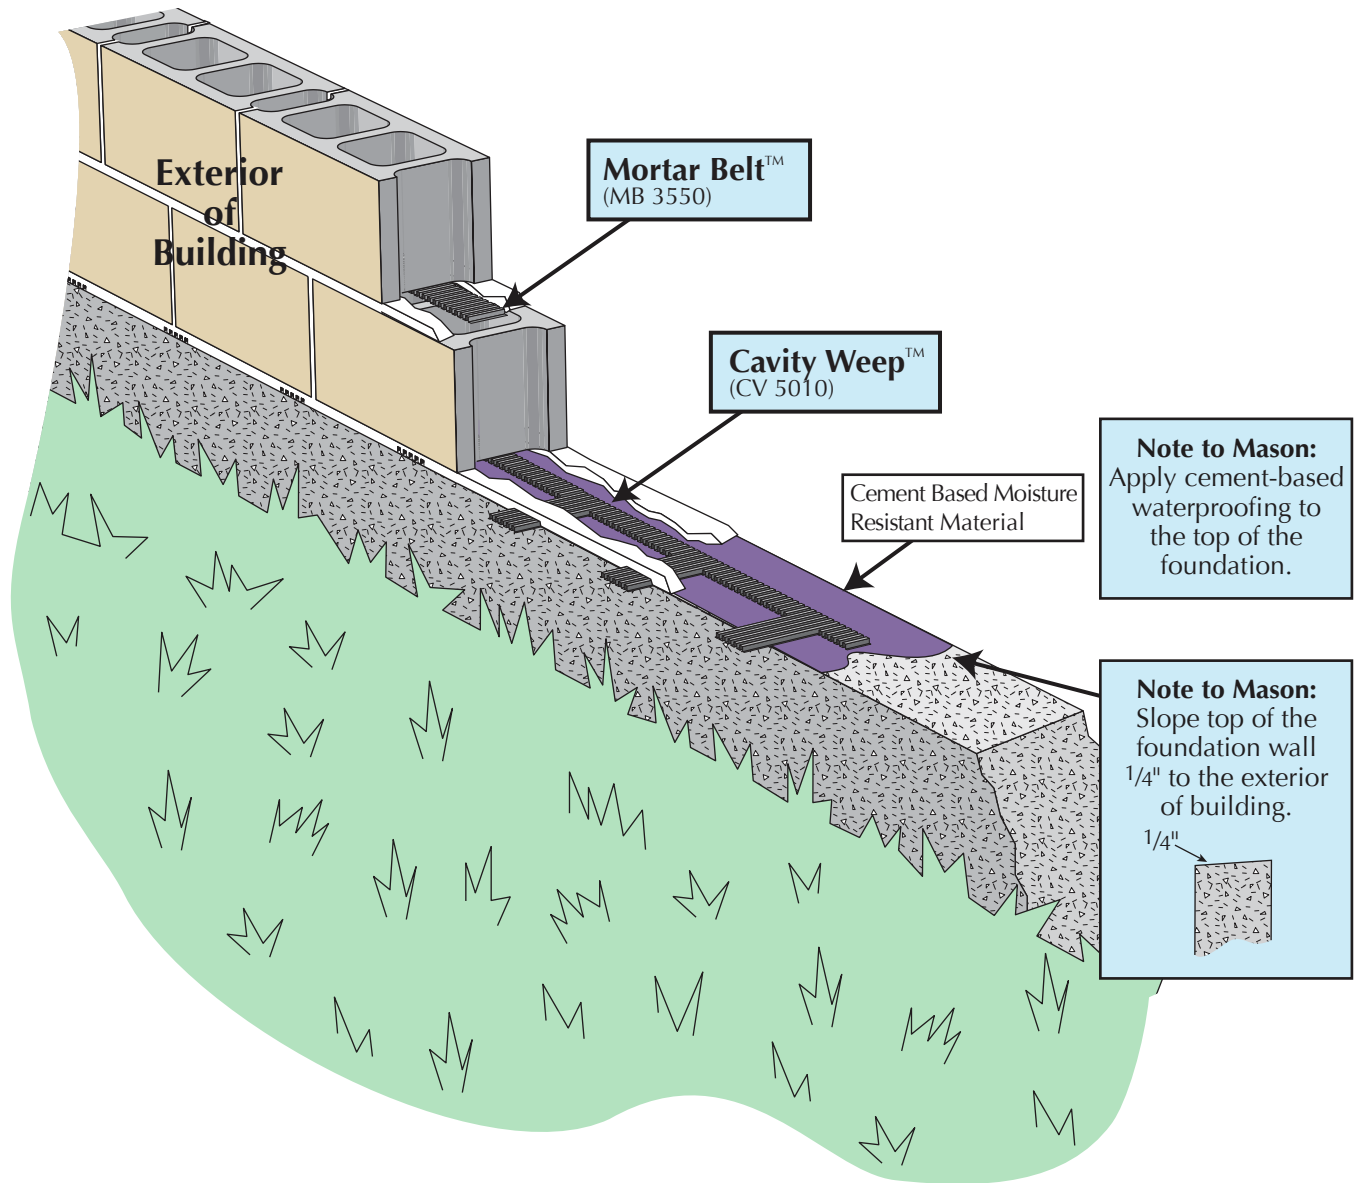

Note to Mason:
Apply cement-based waterproofing to the top of the foundation.

Note to Mason:
Slope top of the foundation wall 1/4" to the exterior of building.
1/4"

Copyright © Masonry Technology Incorporated, 2/2009, All Rights Reserved.

09CM02SW005

MTI details are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These details are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.