

Tuckpoint Retrofit Weep™

TRW 1425
TRW 1425R

For Renovations & Large Masonry Units

Applications

- ✔ Retrofits & Renovations
- ✔ Natural Stone
- ✔ Full Brick

Weeps added to a brick veneer wall

Weeps For Retrofits & Oversized Stone

Unique applications require special weeps. Tuckpoint Retrofit Weeps are the solution for drainage with oversized masonry units as well as renovations where mortar is removed to add weeps.



14" long Tuckpoint Retrofit Weeps are available in 50' rolls or 2 1/2" wide pre-cut weeps


The MTI Advantage

- ✔ Form Bottom of Bed Joint Mortar
- ✔ Weep Directly on Flashing
- ✔ Weeps Standard or Oversize Masonry Units
- ✔ Translucent to Blend with Mortar

Installation

- Removing existing mortar at lowest point in cavity to fit weep
- Space weeps no more than 10" on center
- Insert Tuckpoint Retrofit Weep™ and tuck point mortar on top side of weep only
- Tool joints and lightly score legs at face of wall and crack off by pushing downward while mortar is still plastic
- Finish tool joint and brush

Complete Installation at MTIdry.com/installation

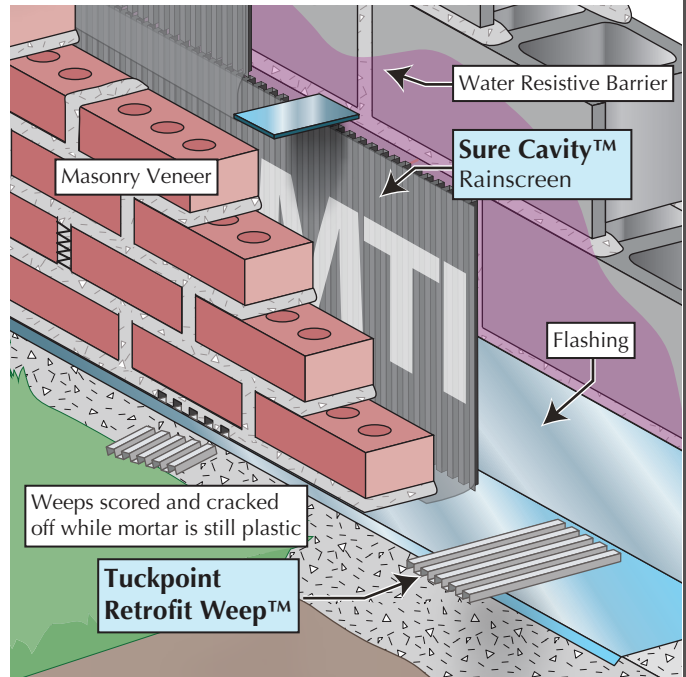

Technical Information

Material Description High impact polystyrene sheets, 0.024 inch (0.6 mm) thick, formed with corrugations.



UV Exposure Over 9 weeks in accelerated UV testing (ASTM G 154)

Fungi Resistance Does not support fungal growth (ASTM C 1338)

Tuckpoint Retrofit Weep


TRW 1425

Pre-Cut Weeps

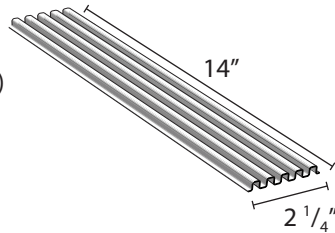

TRW 1425R

Cut-Your-Own Weeps

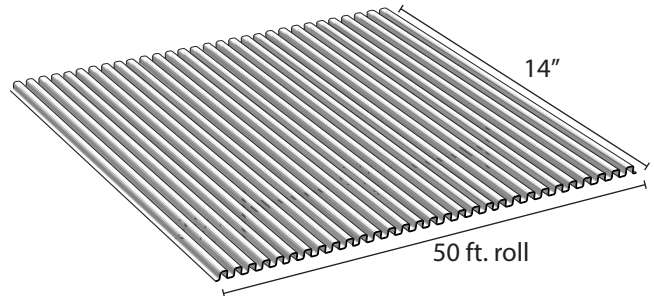

Box 100 pieces

--

Roll --

50 ft

Tuckpoint Retrofit Weep™

For Renovations & Large Masonry Units

TRW 1425
TRW 1425R

Questions about application, installation or ordering?
MTIdry.com/tuck-point-retrofit-weep

