


Vertical Siding At Bottom of Wall Drainage Detail

Sure Cavity™ (SC 5016 or SC 5032) or **Gravity Cavity™** (GC 1816 or GC 1832)
and **Vented Edge Metal™** (VMEM 3168)

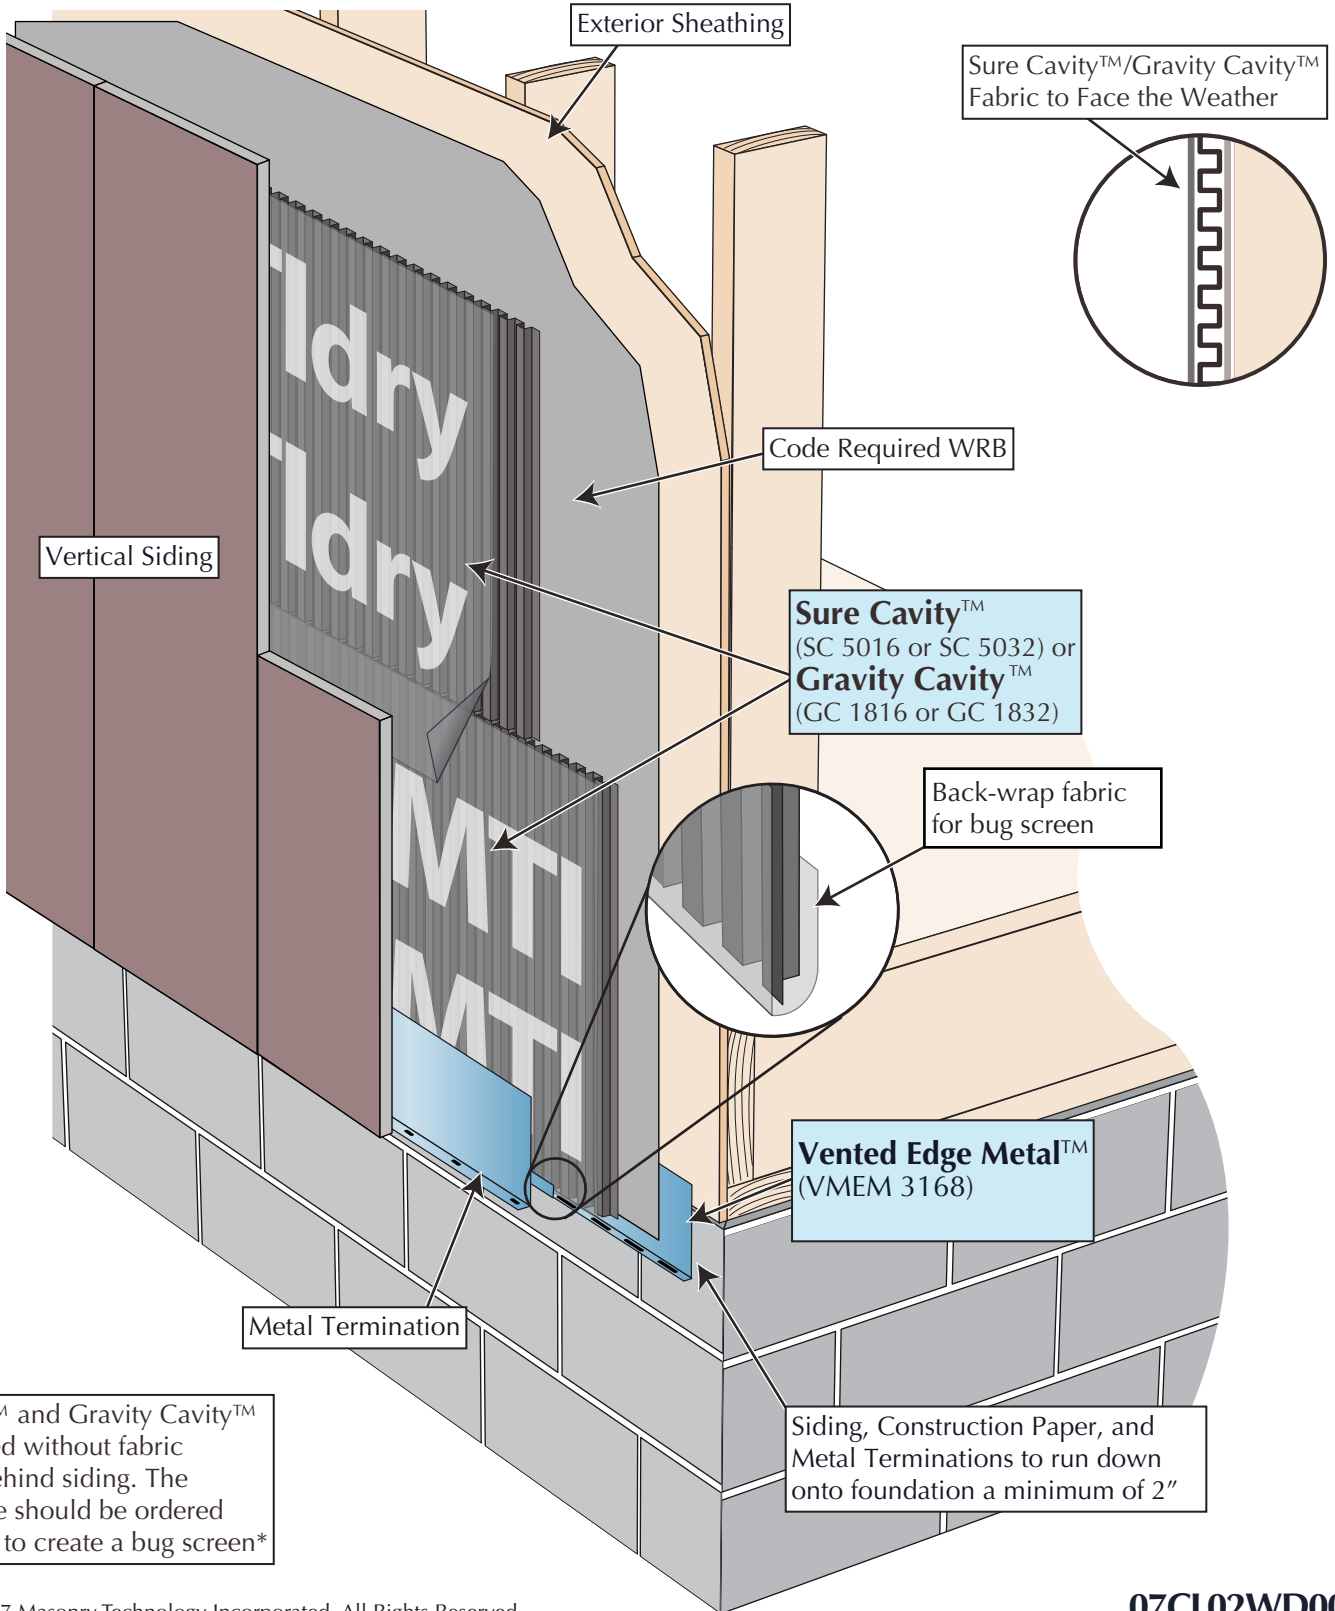

Sure Cavity™ and Gravity Cavity™ can be ordered without fabric when used behind siding. The bottom course should be ordered with fabric as to create a bug screen

Copyright © 2017 Masonry Technology Incorporated, All Rights Reserved.

07CL02WD009

MTI details are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These details are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.