Wall Opening Weeps™

Versatile Weeps for Thin Veneers & More



Weeps Above Openings and Staggered Stone

Windows. Doors. Run-to-grade veneers.

Moisture needs a way out of the wall at each interruption in the drainage plane.

Wall Opening Weeps create a pathway for moisture to drain directly on the flashing.

You'll be WOWed at how they unlock your creativity to create great looking exteriors that will last for generations.

The MTI Advantage

- **⊘** Form Bottom of Scratch Coat
- Maintain Vertical Channels into Thin Veneer Walls
- Weep Directly on Flashing
- **⊘** Work in a Variety of Exteriors
- **⊘** Foolproof Installation

Applications

- **⊘** Stucco, Thin Stone or Brick
- Natural Stone
- **⊘** Full Brick

Weeps above a window in a thin stone veneer



L-shaped weeps create weep tunnels directly on flashing



Wall Opening Weeps with Sure Cavity on natural stone




Detail Drawings • BIM • Free Consultation • Videos

Installation

- Install Wall Opening Weeps™ on flashings 10" on center
- Install Sure Cavity™ rainscreen with fabric skirt lapping over Wall Opening Weeps
- Apply scratch coat or mortar and exterior veneer
- Tool joints and lightly score legs of Wall Opening Weeps at face of wall and crack off by pushing downward while mortar is still plastic
- Finish tool joint and brush

Wall Opening Weeps are used in a variety of unique details. Visit MTIdry.com/installation for instructions specific to your wall assembly

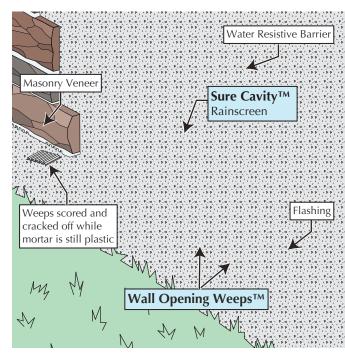

Technical Information

Material High impact polystyrene sheets, 0.024 inch (0.6 mm) thick, formed with corrugations. **Description**


UV Exposure

Over 9 weeks in accelerated UV testing (ASTM G 154)

Fungi Resistance Does not support fungal growth (ASTM C 1338)

Wall Opening Weeps

WOW 9095

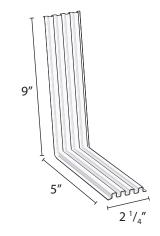

Related Products:

- Cavity Weep™
- Stone Cavity Weep™
- ▶ Head Joint Weeps™

Box 100 pieces

0.024" (0.6 mm)

