


Brick Veneer Rainscreen Retrofit Transition to Existing Sheathing

After Gutting a Flooded Home

Sure Cavity™ (SC 5016) or **Gravity Cavity™** (GC 1816)

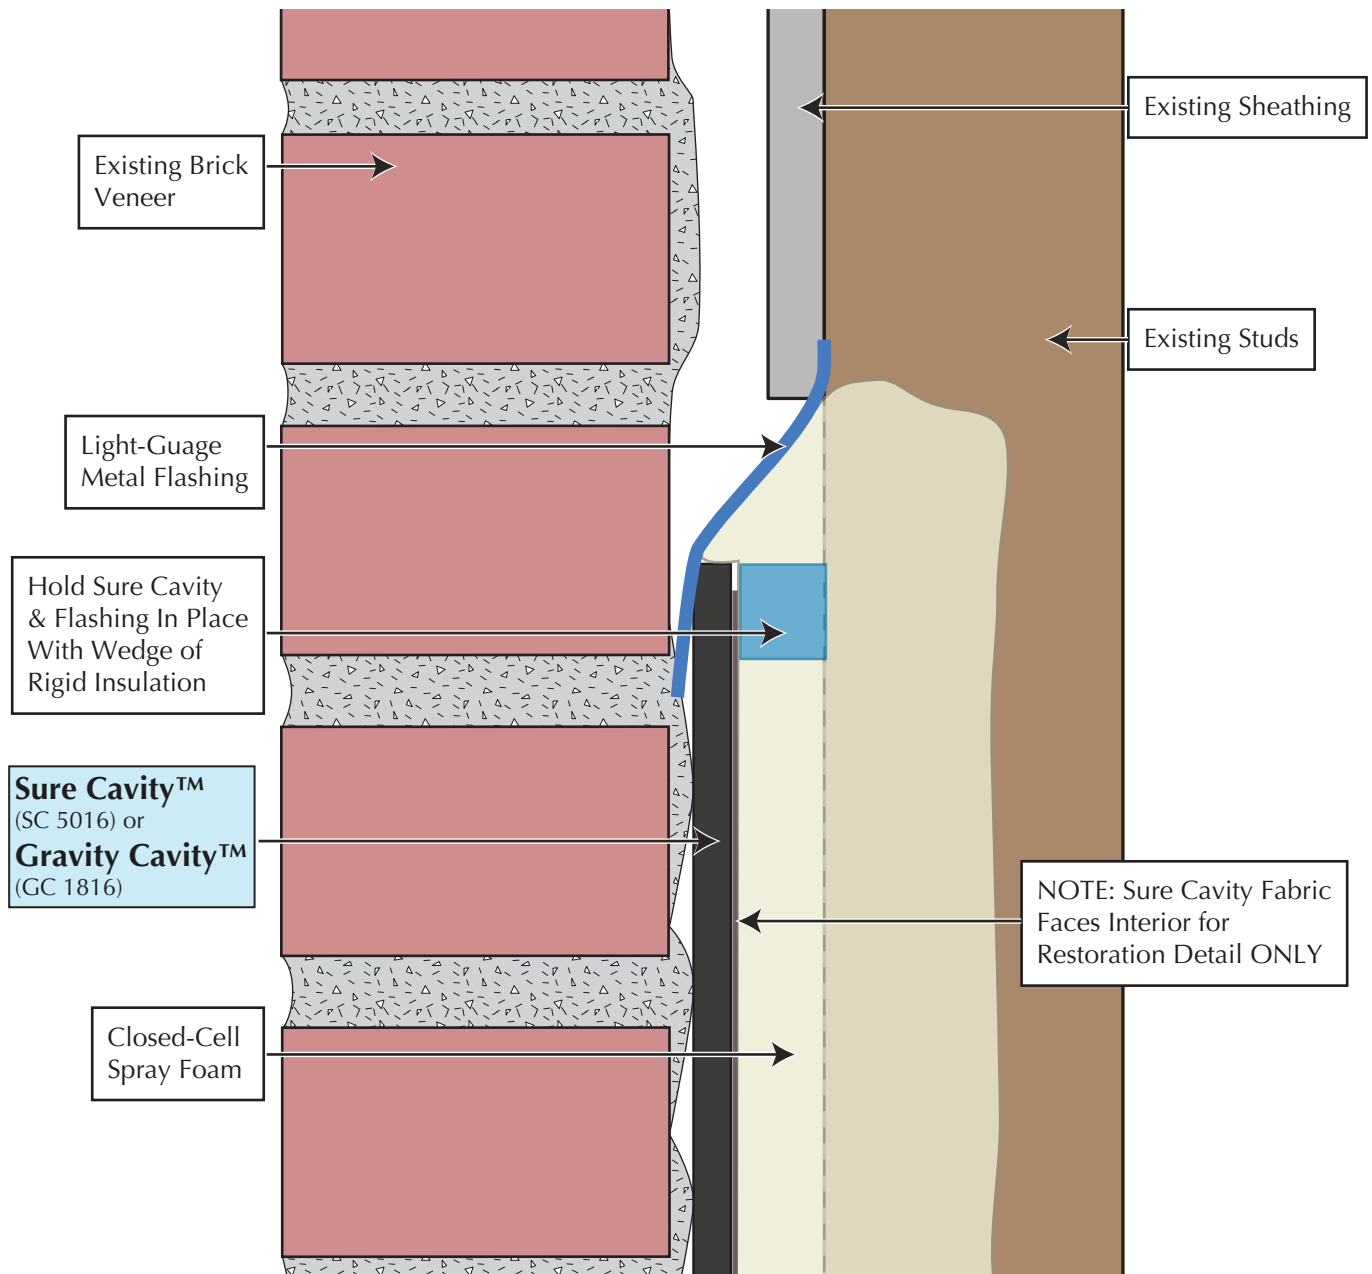

Note: The retrofit approach described in this detail is not standard building practice. Consult your licensed contractor, building official and insurance inspector for acceptability of any repair method considered.

Consider using in conjunction with a "wet floodproofing" approach to finishing the interior walls.

More at MTIdry.com/rebuild